



Vehicle: Electrical Diagrams

Steering

EPS

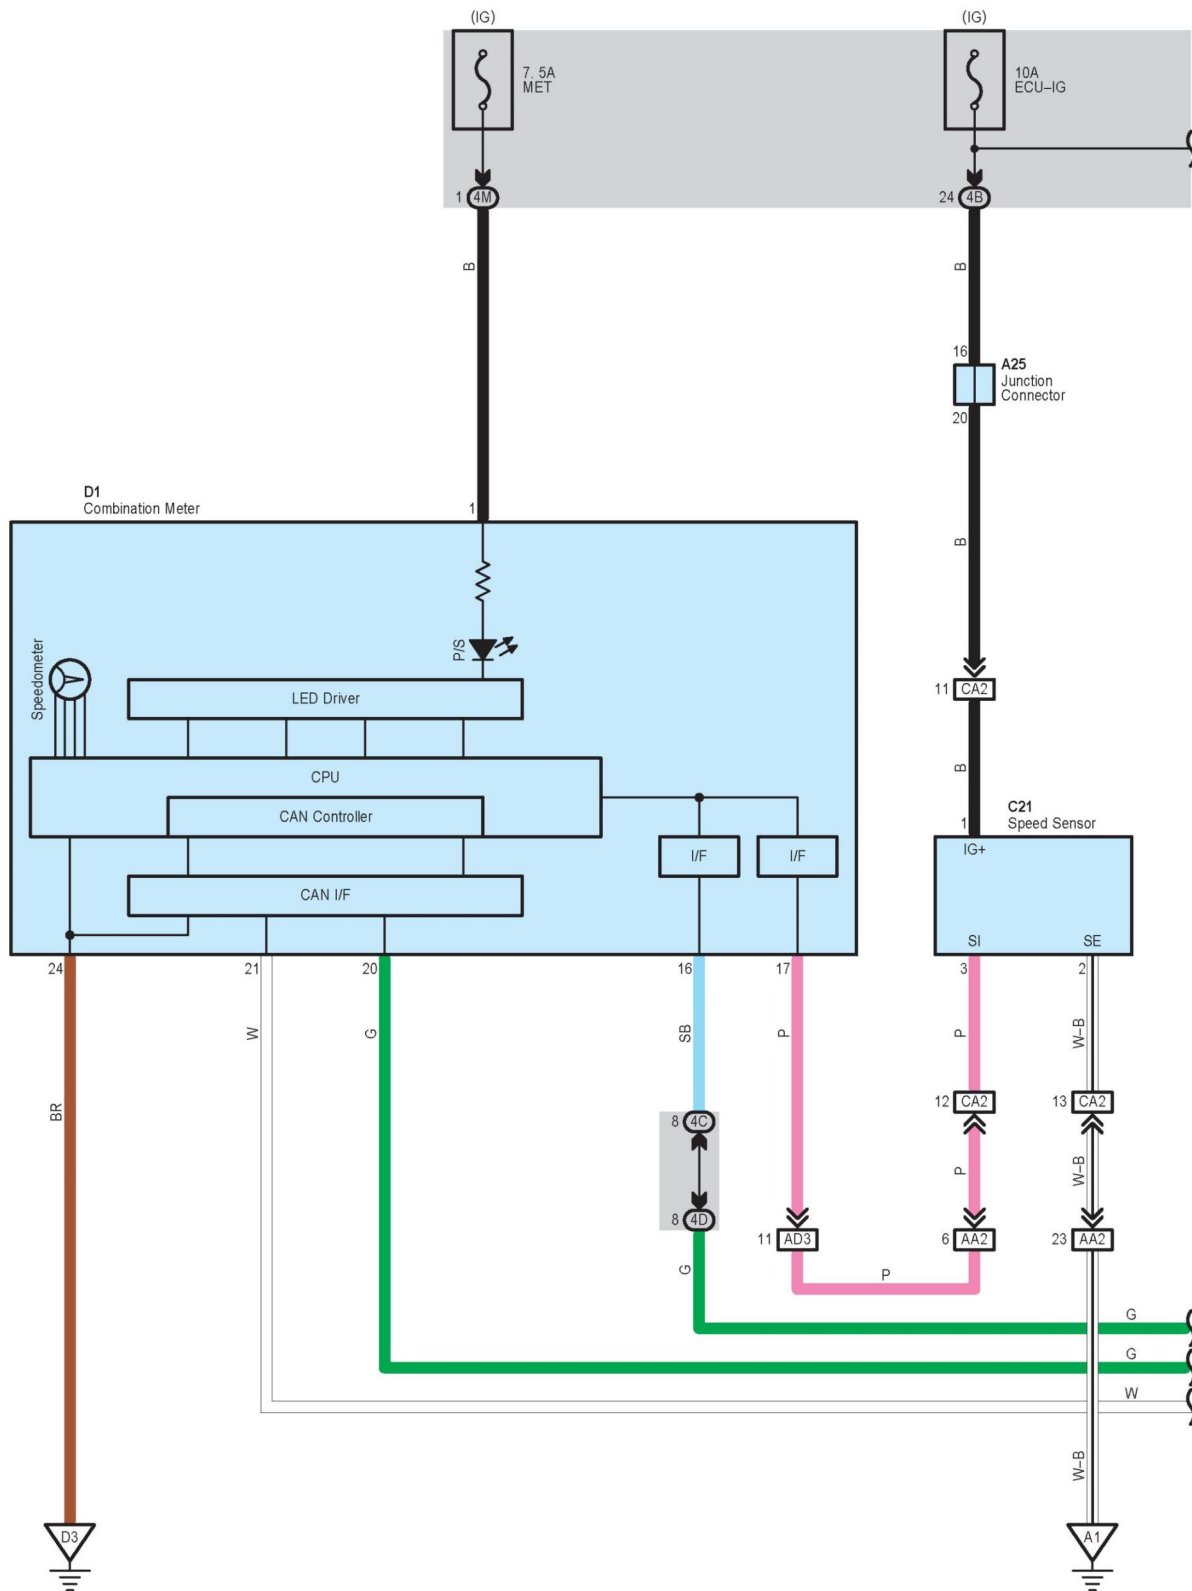

EPS Part 1

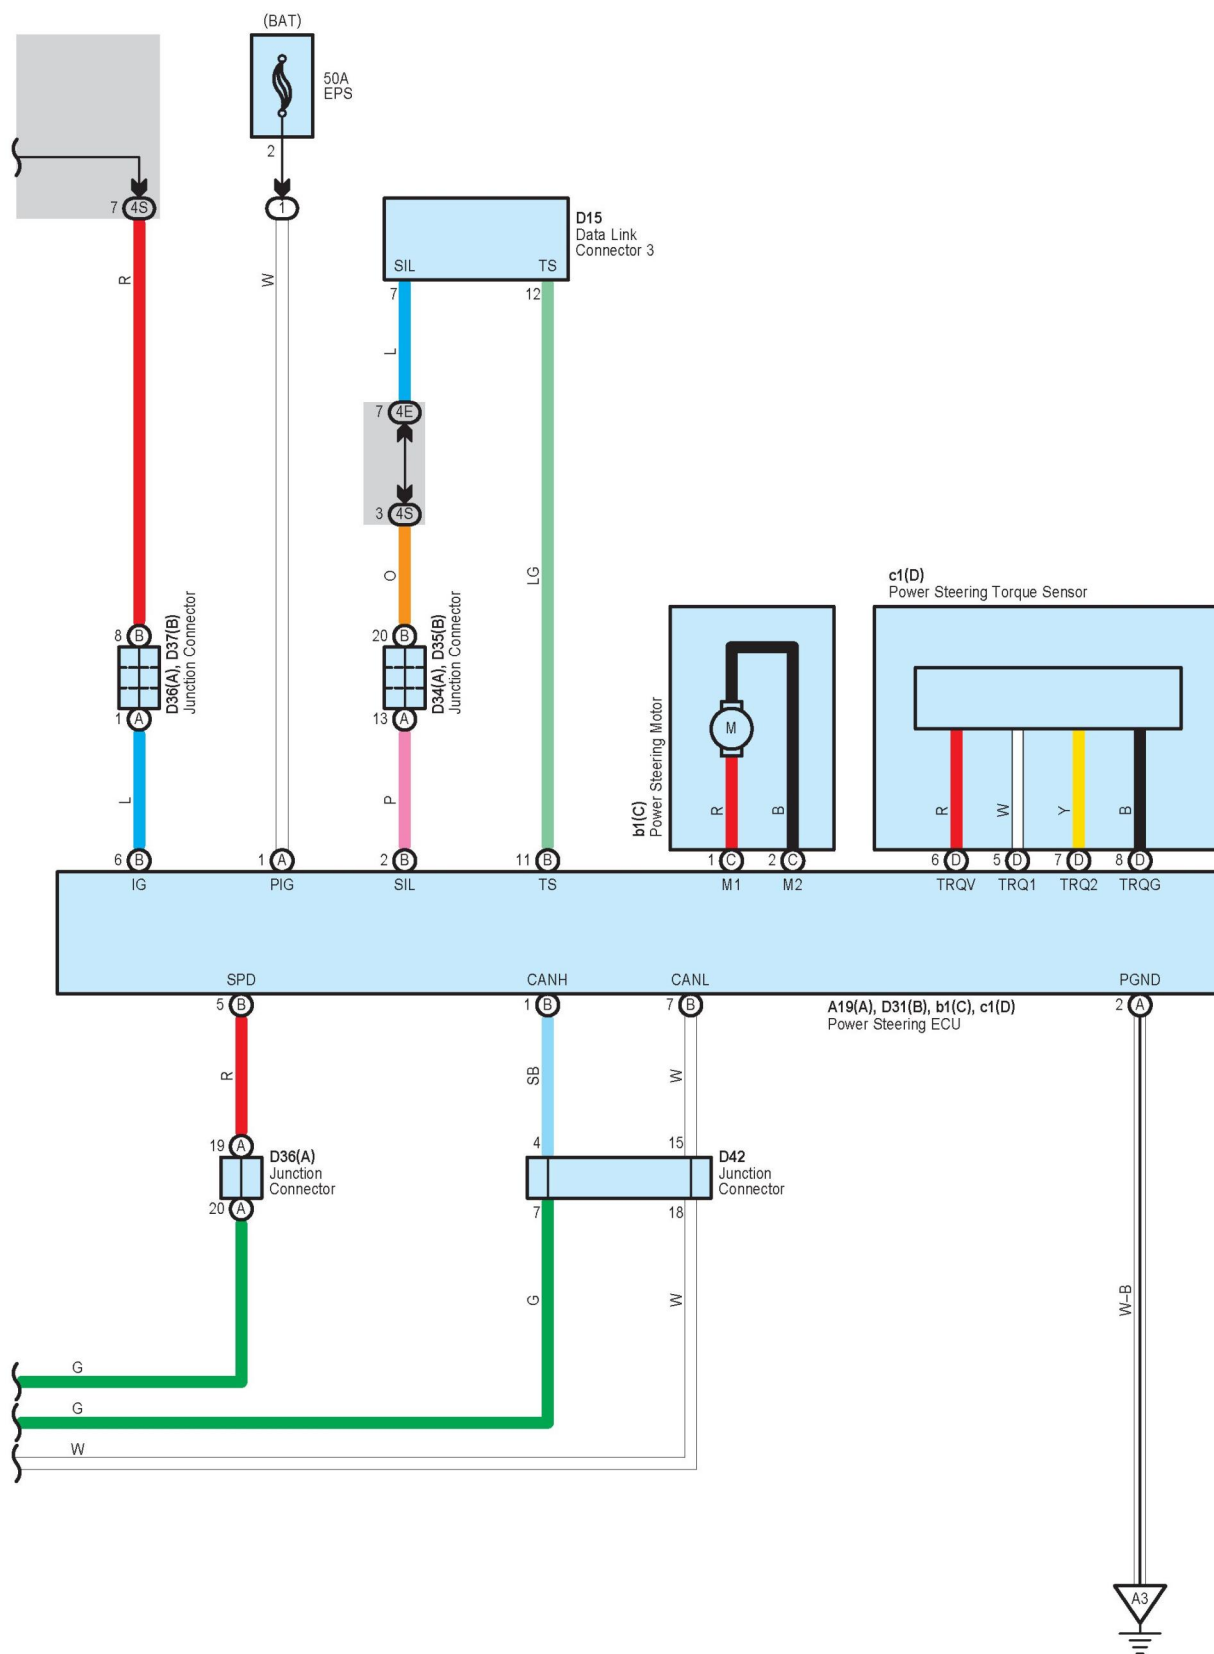

EPS Part 2

 : Relay Blocks

Code	Relay Blocks (Relay Block Location)
1	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
4B	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
4C	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
4D	
4E	
4M	
4S	

 : Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
AA2	Engine Room Main Wire and Engine Room Main Wire (Instrument Panel Left)
AD3	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Left)
CA2	Engine Wire and Engine Room Main Wire (Engine Compartment Left)

 : Ground Points

Code	Ground Points Location
A1	Left Suspension Tower
A3	Left Cowl Top Side Panel
D3	Instrument Panel Reinforcement Left

Diagram Legend

Locations: The locations of components, connectors, ground points, and splices referred to within these diagrams can be found at Vehicle Locations. See: Locations

Connector Views: The connector views for connectors referred to within these diagrams can be found at Vehicle level Connector Views. See: Connector Views