


1999 Toyota Camry LE

1999-2000 BRAKES Anti-Lock - Camry - Denso

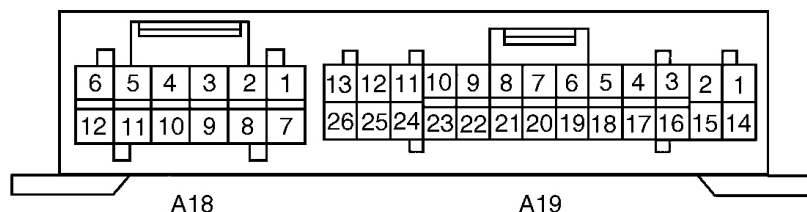

Symbols (Terminals No.)	STD Voltage (V)	Condition
IG1 (A19 – 13) – GND (A19 – 12, 25)	10 – 14	IG switch ON
R+ (A19 – 26) – SR (A18 – 7)	9 – 14	IG switch ON, ABS warning light OFF
R+ (A19 – 26) – MR (A18 – 1)	Below 1.0	IG switch ON
SFRR (A19 – 1) – GND (A19 – 12, 25)	10 – 14	IG switch ON, ABS warning light OFF
SFRH (A19 – 2) – GND (A19 – 12, 25)	10 – 14	IG switch ON, ABS warning light OFF
SFLR (A18 – 6) – GND (A19 – 12, 25)	10 – 14	IG switch ON, ABS warning light OFF
SFLH (A18 – 5) – GND (A19 – 12, 25)	10 – 14	IG switch ON, ABS warning light OFF
SRRR (A18 – 12) – GND (A19 – 12, 25)	10 – 14	IG switch ON, ABS warning light OFF
SRRH (A18 – 11) – GND (A19 – 12, 25)	10 – 14	IG switch ON, ABS warning light OFF
SRLR (A19 – 14) – GND (A19 – 12, 25)	10 – 14	IG switch ON, ABS warning light OFF
SRLH (A19 – 15) – GND (A19 – 12, 25)	10 – 14	IG switch ON, ABS warning light OFF
WA (A19 – 11) – GND (A19 – 12, 25)	Below 2.0	IG switch ON, ABS warning light ON
	10 – 14	IG switch ON, ABS warning light OFF
STP (A19 – 5) – GND (A19 – 12, 25)	Below 1.5	Stop light switch OFF
	8 – 14	Stop light switch ON
D/G (A19 – 24) – GND (A19 – 12, 25)	10 – 14	IG switch ON, ABS warning light OFF
Tc (A19 – 8) – GND (A19 – 12, 25)	8 – 14	IG switch ON
Ts (A19 – 21) – GND (A19 – 12, 25)	8 – 14	IG switch ON
FR+ (A18 – 3) – FR– (A18 – 9)	AC generation	IG switch ON, slowly turn right front wheel